

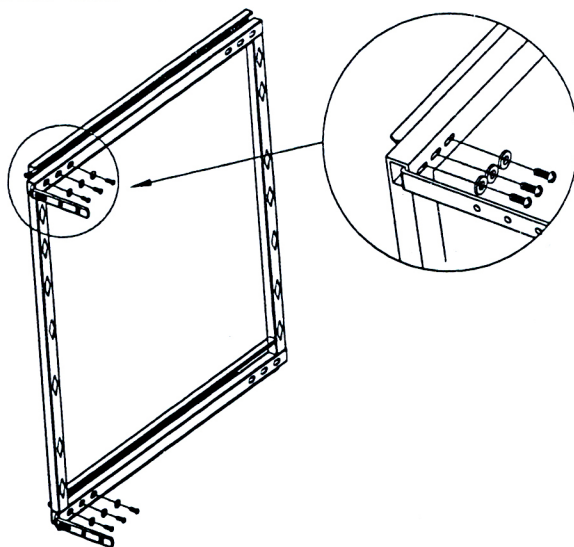


Three Layers Full Extension moved side drawing basket Installation


- 1 A According to the size fixed runner inner the frame with the screw.
B Locking tighten the connecting hand of door and the main frame with screw.

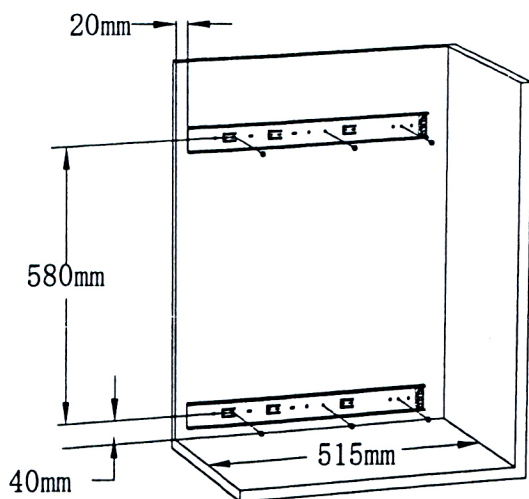

- 2 Fixing the main frame inner runner of frame.

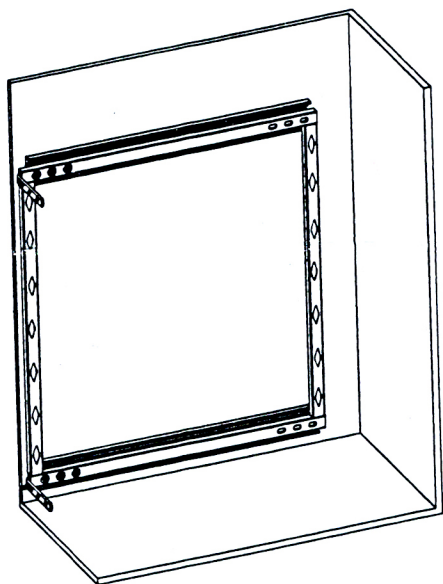

- 3 Hunting the drawing basket as the picture, finished the installation.

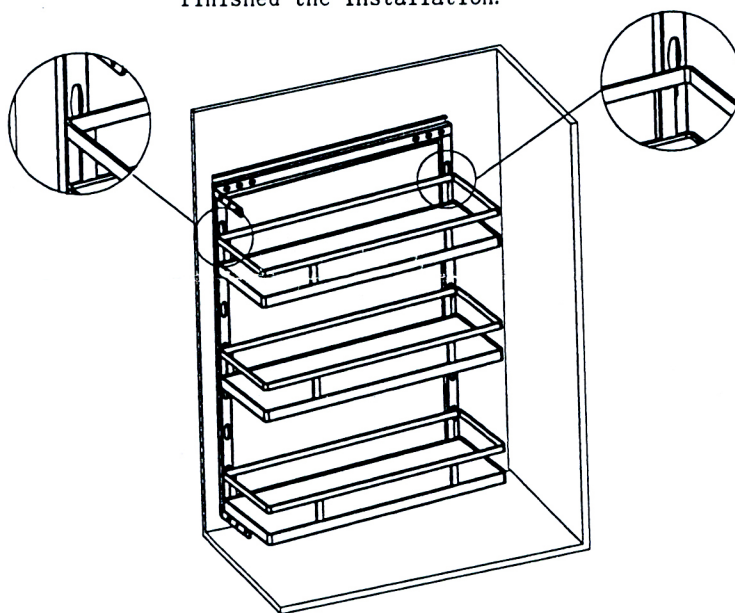

- 4 Moved tracking picture

